


## Large format levelling spacers

The spacers for the Litokol levelling system simplify the work of installers when laying large formats and low-thickness tiles from 3 to 6 mm. These spacers consist of two elements: base and wedge; pliers are also available to tighten the wedge within the base by exerting optimum pressure in order to obtain a level installation. Once the adhesive has hardened the base is easily removed using a rubber mallet or by simply using your foot whereas the wedge can be reused several times.

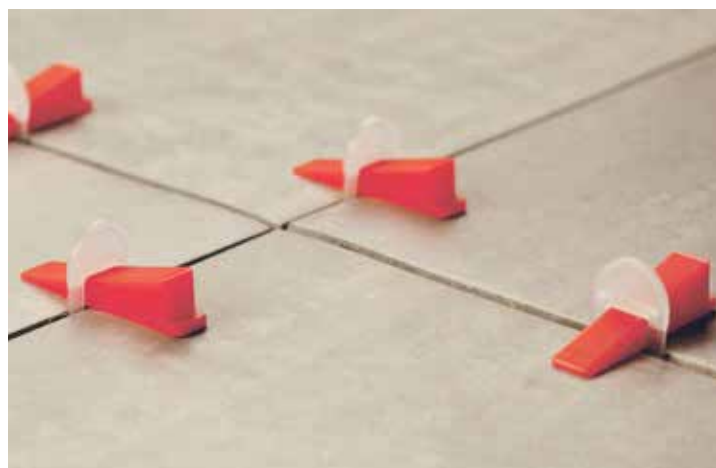




## ART. 170/K

Kit consisting of pliers + 100 wedges + 100 bases for tile thickness from 3 to 12 mm



**Art. 170/B**  
Spacer base

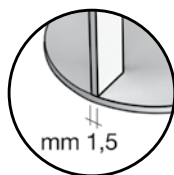



Article		
<b>DLVBAS0500</b>	1x500	8x500





Apply the adhesive and place the support under the tile on all four sides. Position one or more supports per side according to the side of the tiles. Set the tiles and tap them using the rubber mallet.




It is recommended to use the special pliers without using force, to avoid reaching the breakpoint.

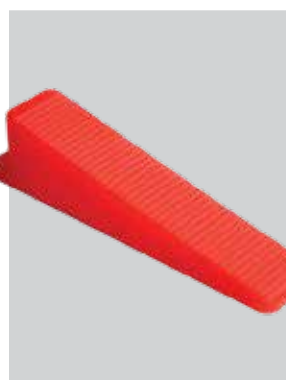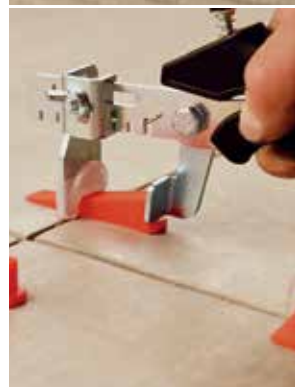


**Art.170/C**  
Spacer wedge

Article		
<b>DLVCUN0100</b>	1x100	24x100

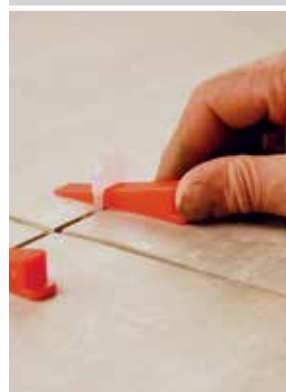

Place the wedge inside the slit of the support.

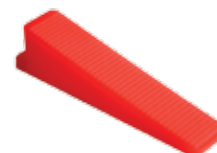

Once the adhesive has set, remove the wedge and the protruding part of the support by tapping in the direction of the grouting line, using the rubber mallet or by using your foot  
**Minimum width of joint/grouting: 1.5 mm**  
**Tile thickness: from 3 to 12 mm**